 


**Work
like new**

FlexiSpot

Item No. E7B-PRO-UK/E7W-PRO-UK
User Manual

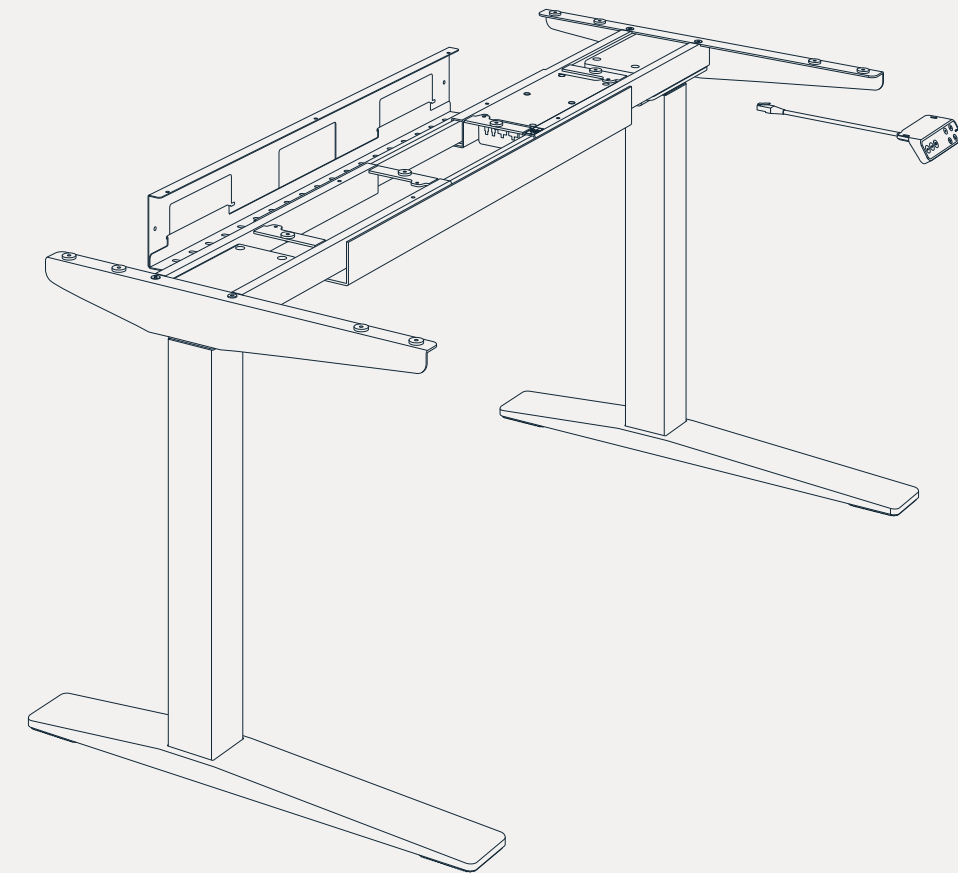





Specifications

Max. Weight Capacity	160 kg
Max. Speed	40mm/s
Adjustable Height	635mm-1285mm
Adjustable Width	L(1200mm-2000mm)×W(600mm-800mm)×H(≥18mm)

 
Pre-installation Guide



Assemble on a foam
to prevent scratch

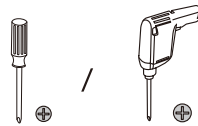 

 Phillips screwdriver or drill required
(not provided)

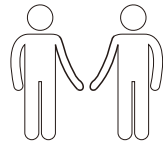

Get a friend for help

 
Accessory Package

Ax4	Bx4	Cx8	Dx8	Ex15

 


Diagram of Components


No.	Part
①	Supproting beam x1
②	Lifting column x2
③	Feet x2
④	Left side bracket x1
⑤	Right side bracket x1
⑥	Cable tray x1
⑦	Cable holder x1
⑧	Cable tray x1
⑨	Power plug x1
⑩	T-wrench x1
⑪	Feet pad x4
⑫	Cable manager x1
⑬	Velcro x1
⑭	Keypad x1
⑮	Keypad screw x2
⑯	4x4 wrench x1

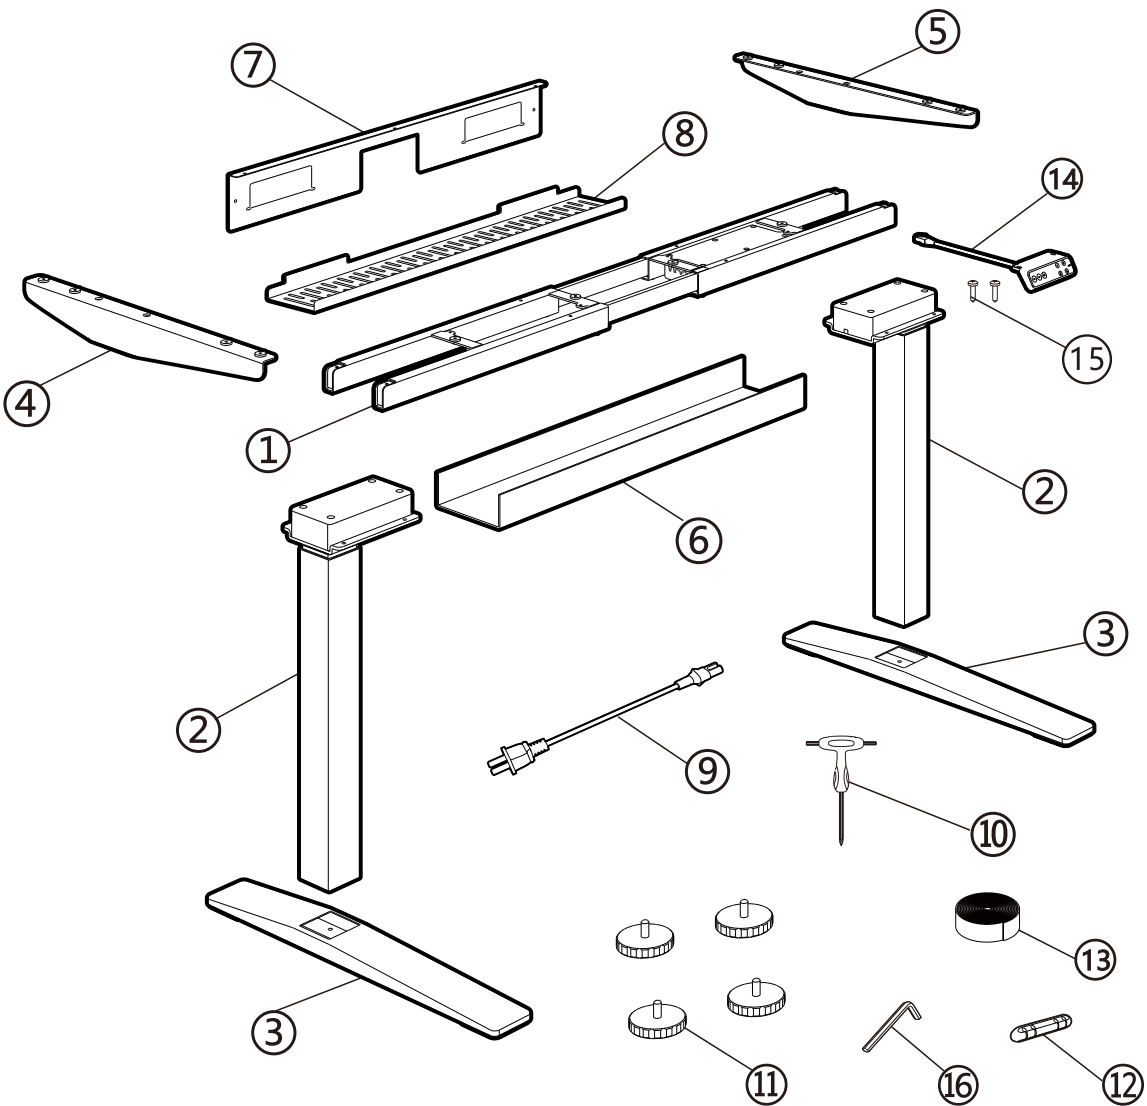


1 Attach the side brackets to the beam

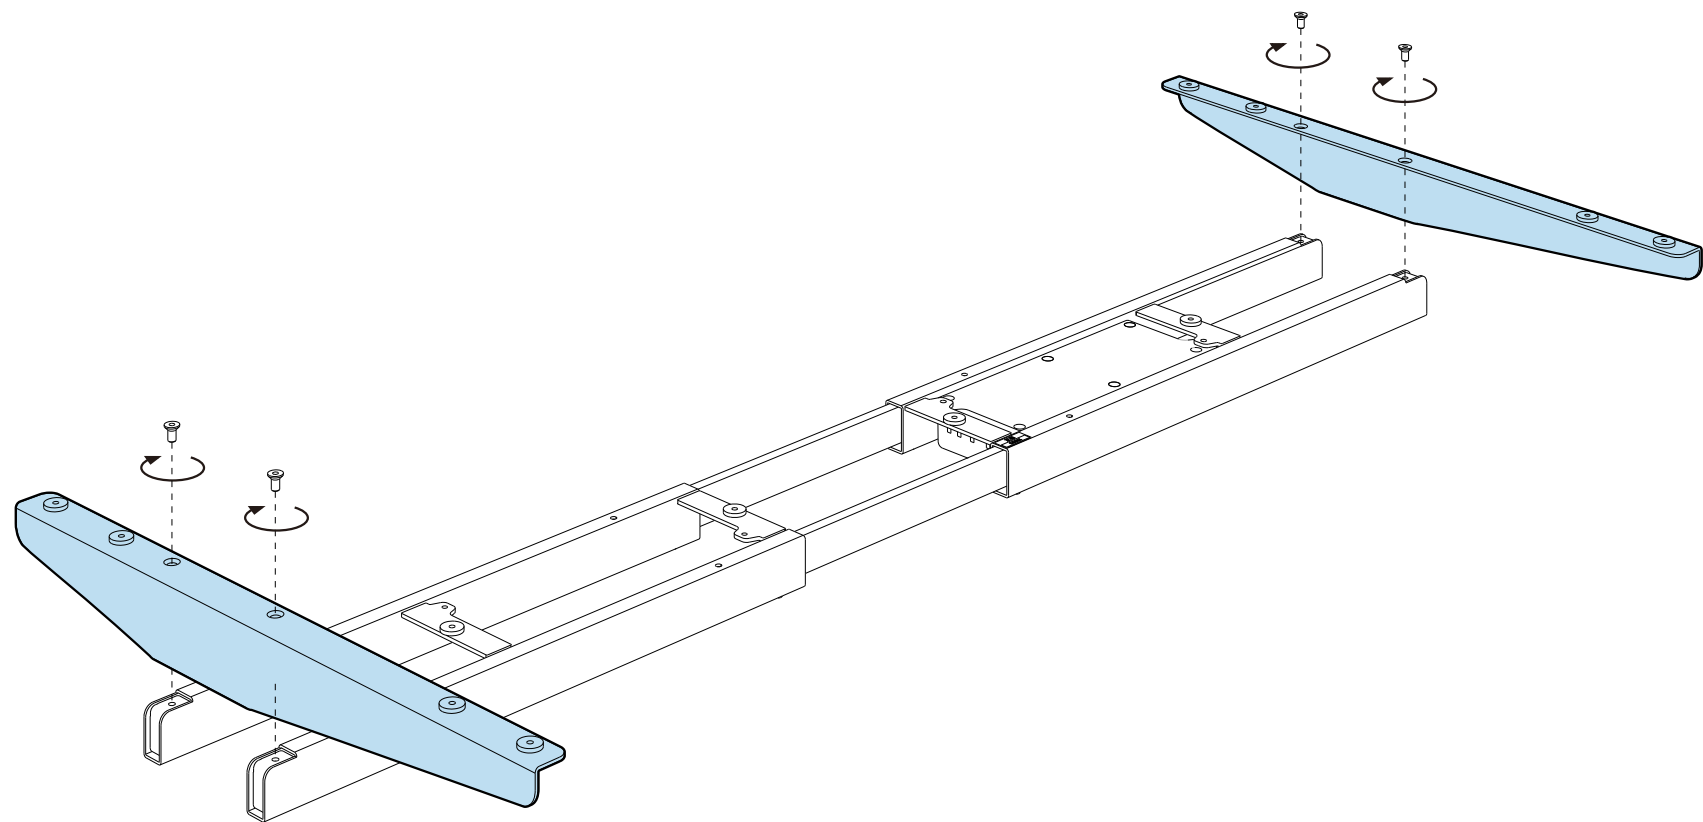


 
2 Adjust the length of the frame

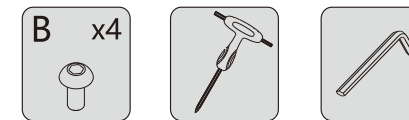

 - a) Loosen the four screws shown  and adjust the length of the crossbar
- b) After confirmation, tighten the eight screws shown by  and 


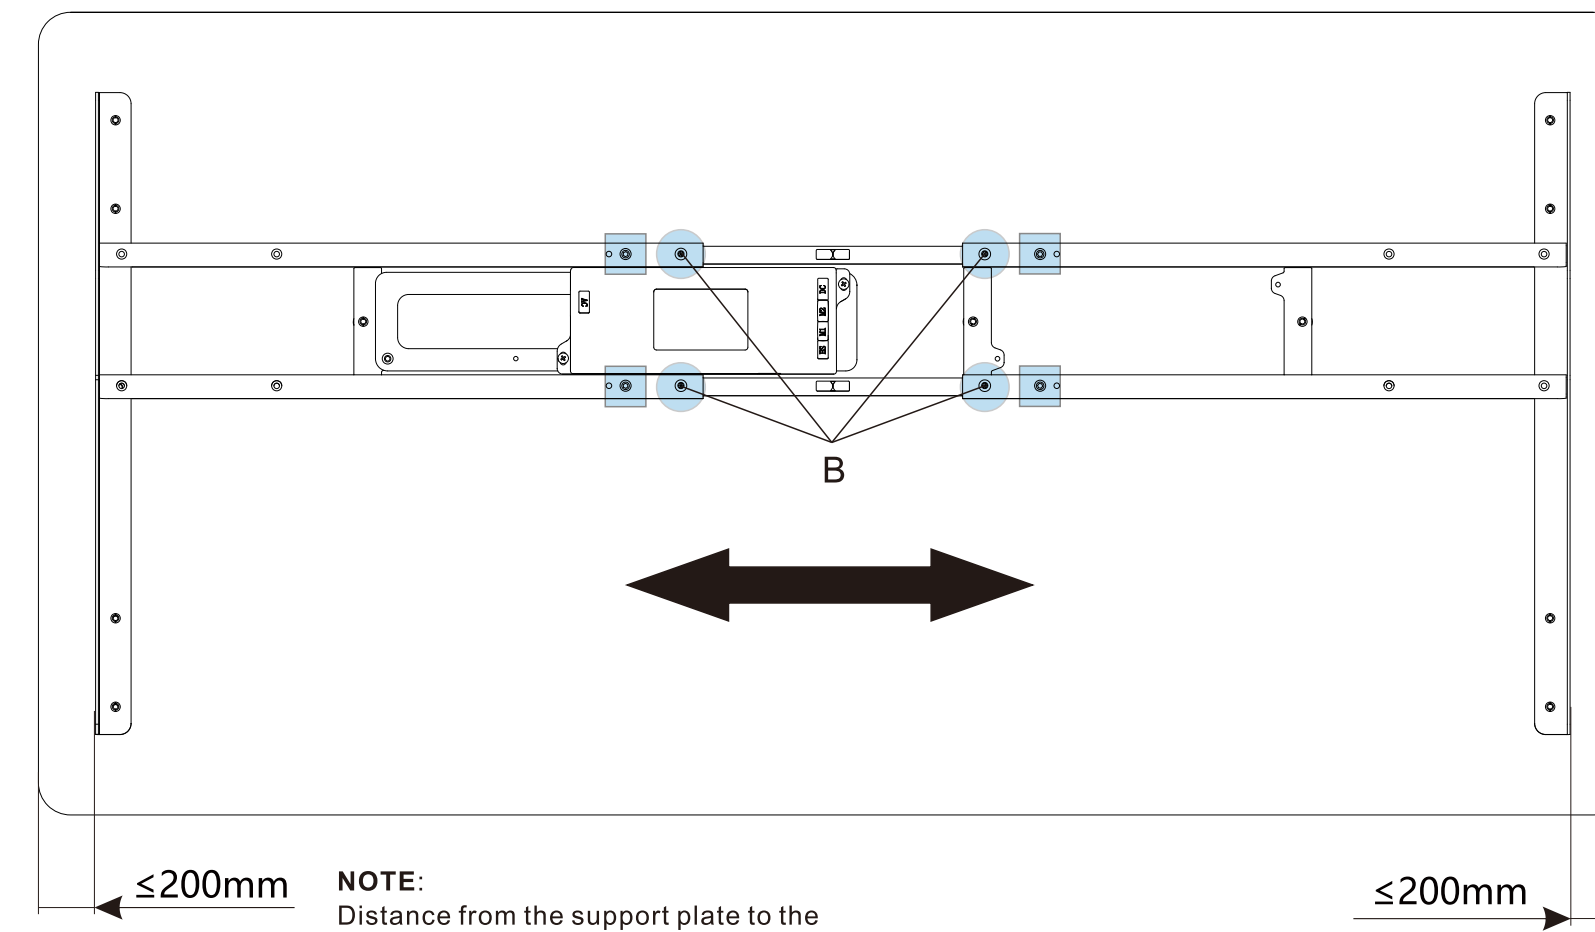


3 Affix the tabletop

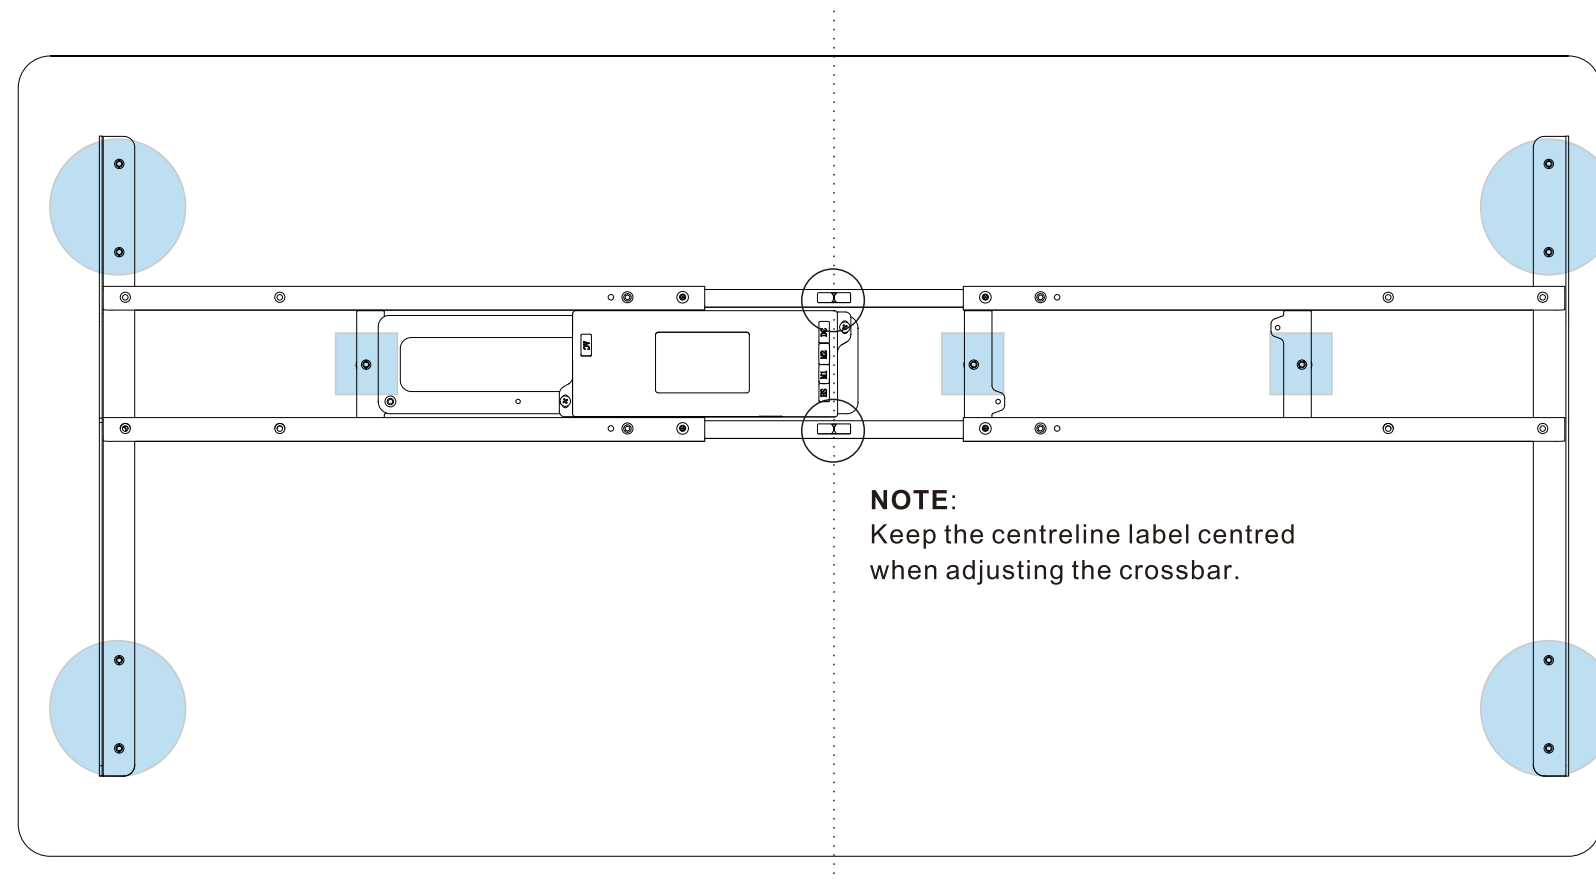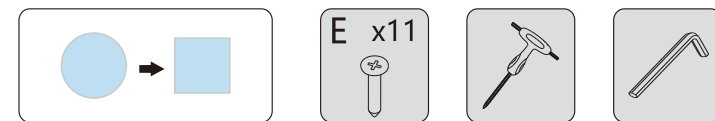  


NOTE:
When the beam is stretched to the widest point, 11 screws need to be installed to fix the table, and 1 spare screw.
Otherwise, only 10 screws need to be installed to fix the table, and 2 spare screws.

  
4 Install the leg columns

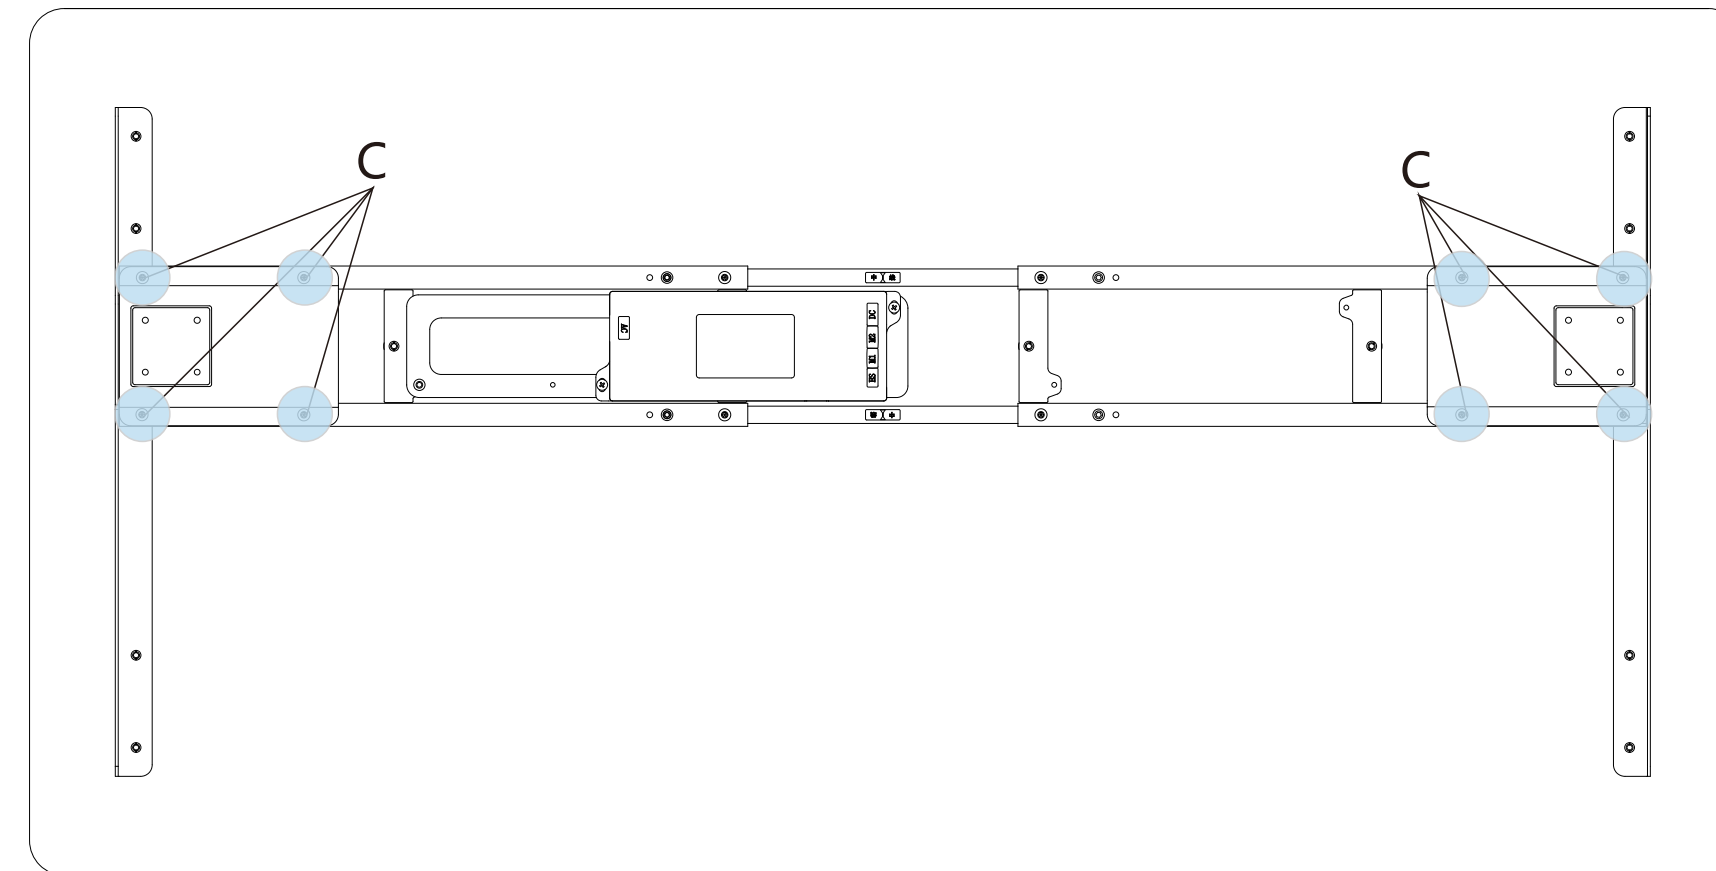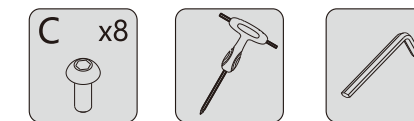




5 Attach the feet

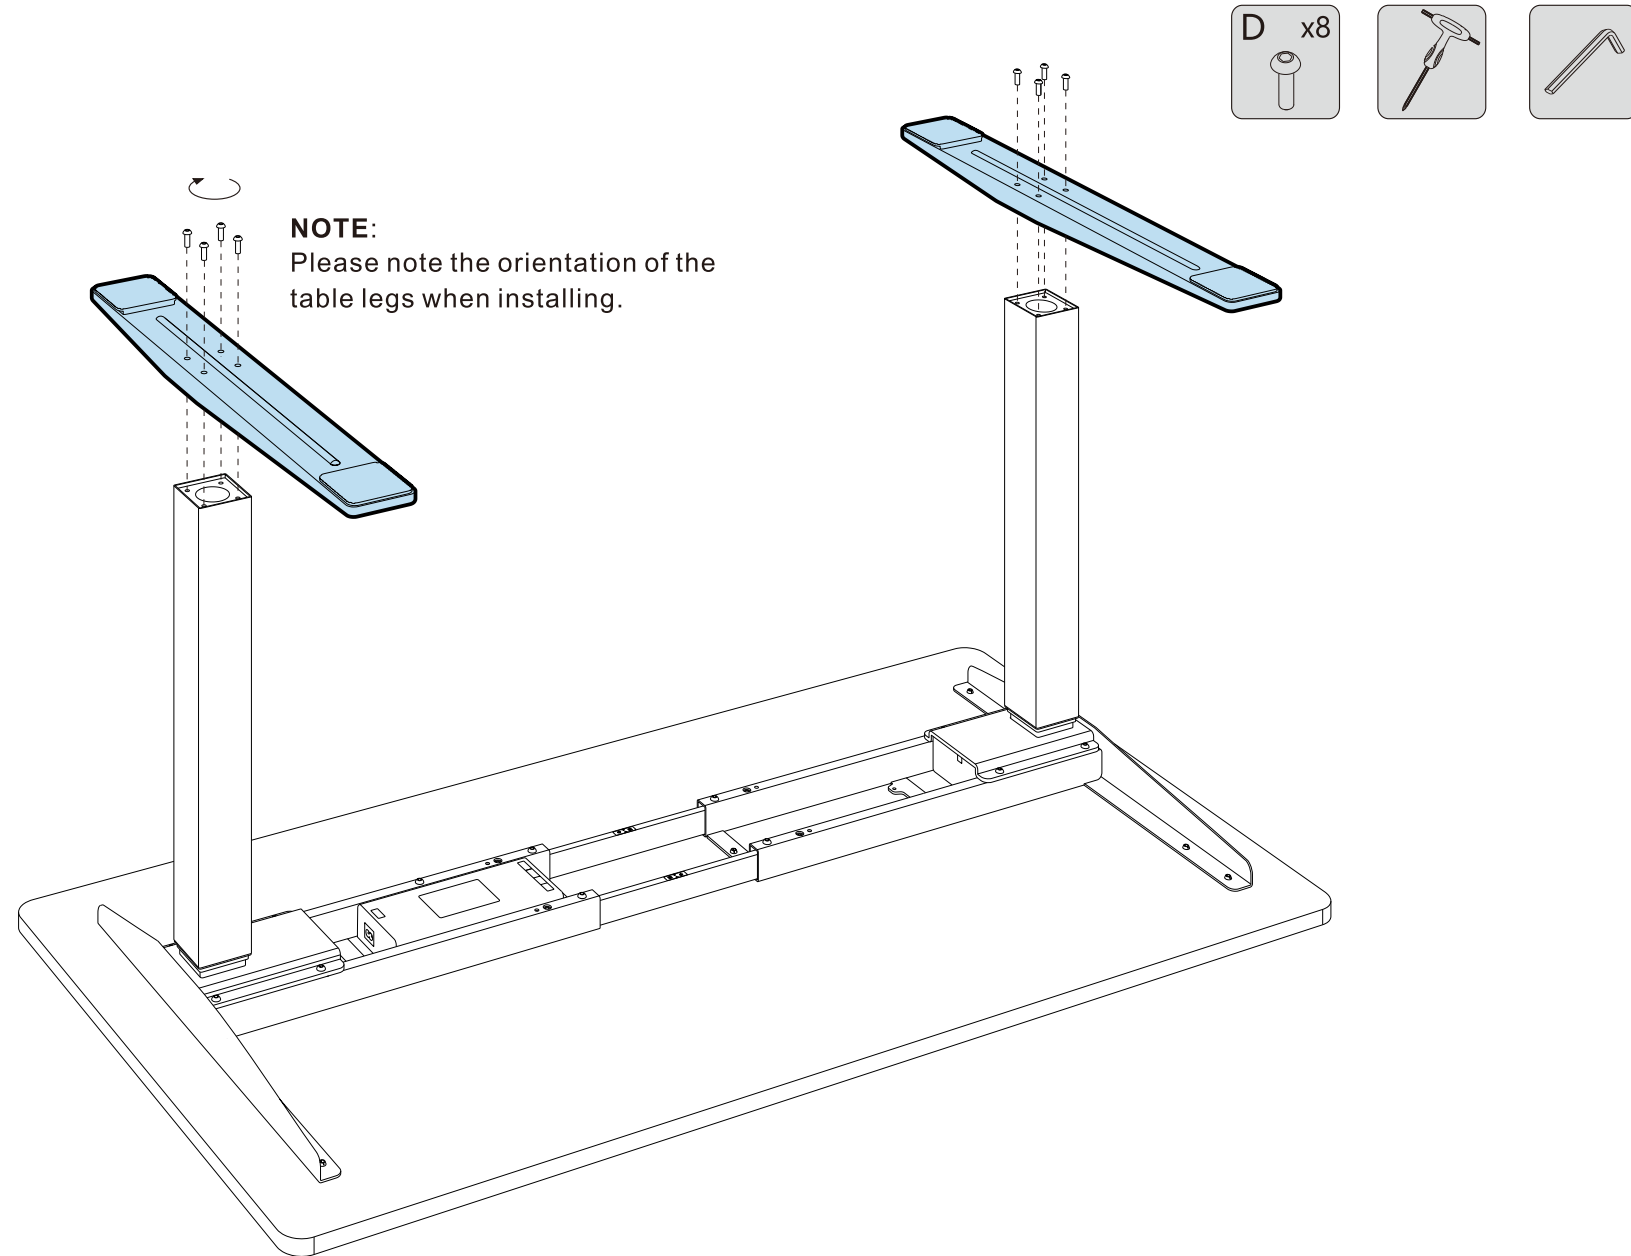 



6 Fix the keypad

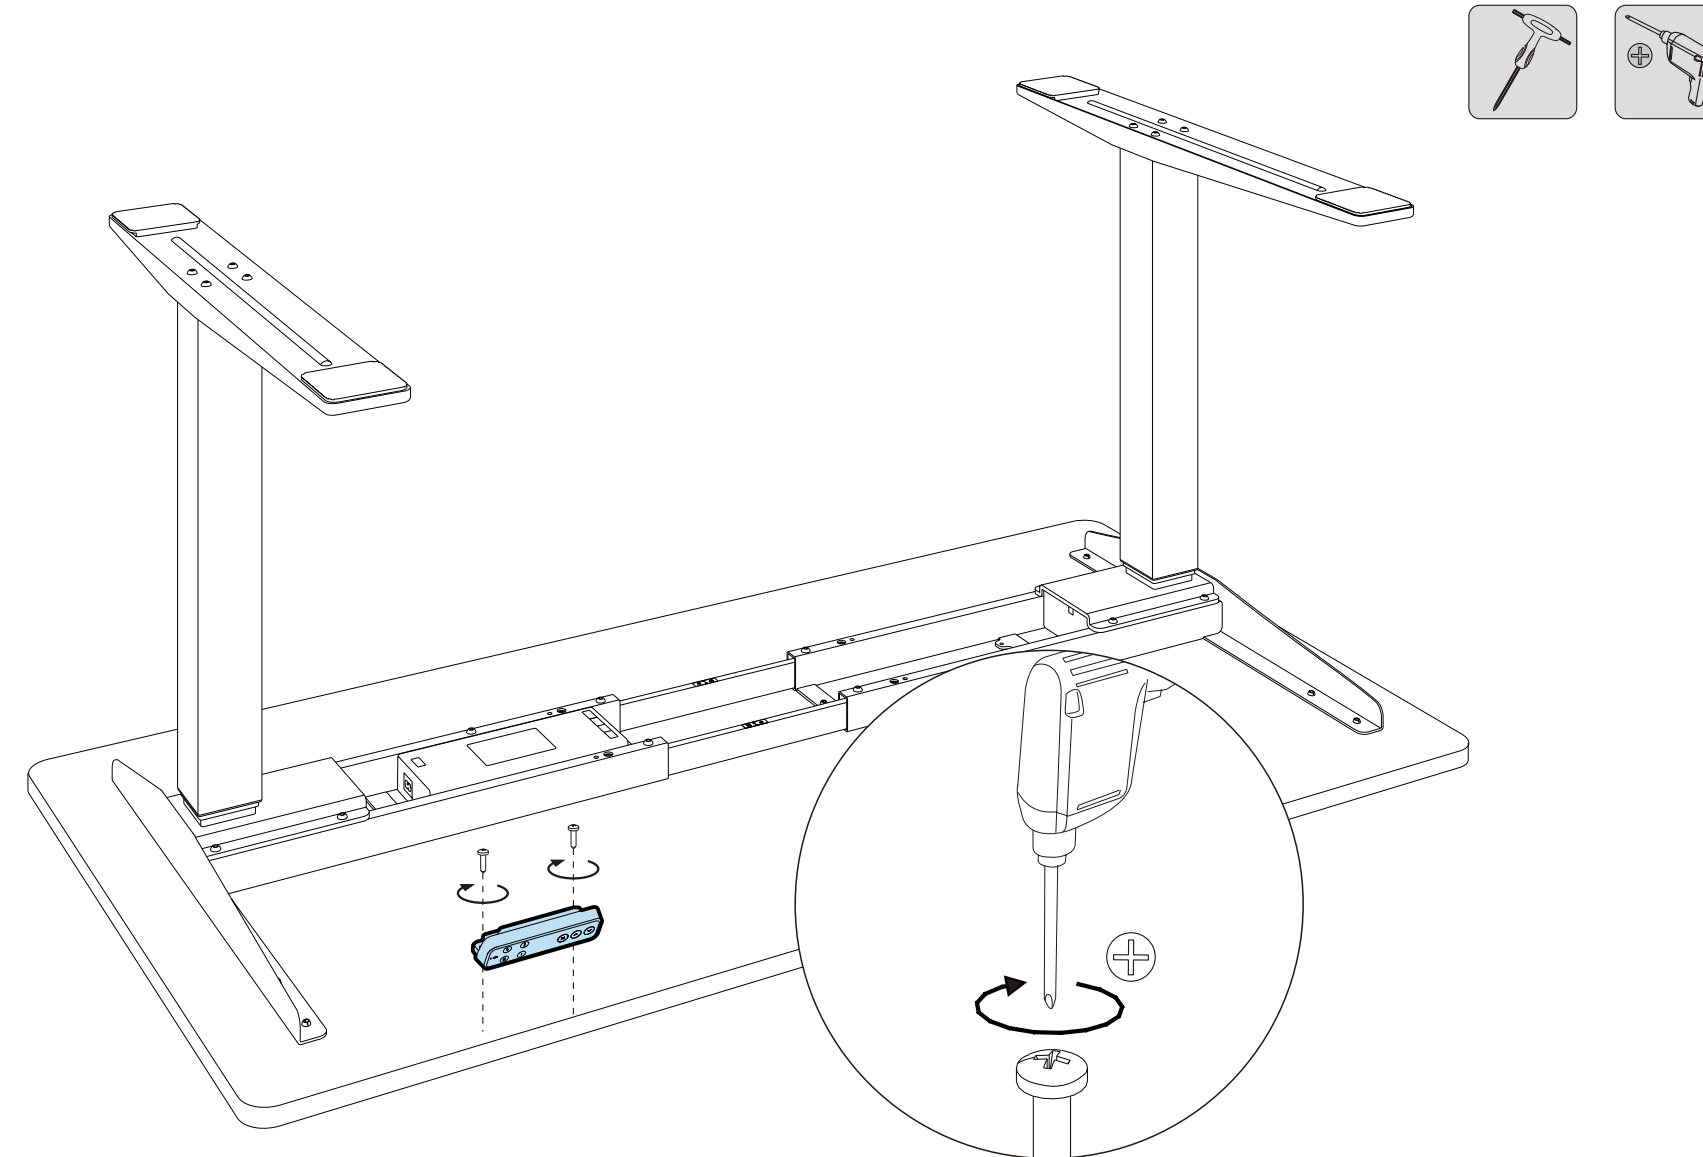 


7 Connect the wires

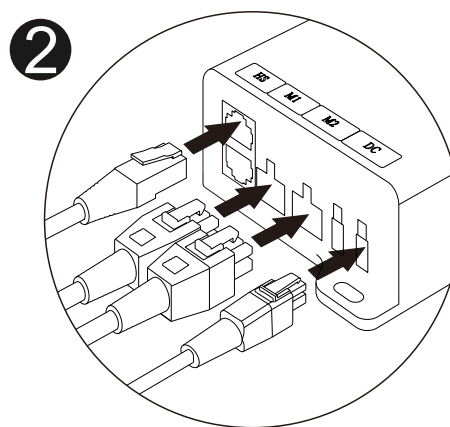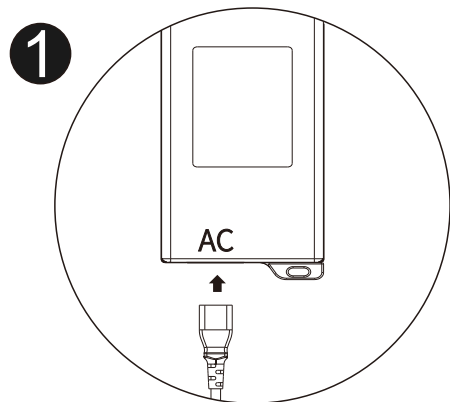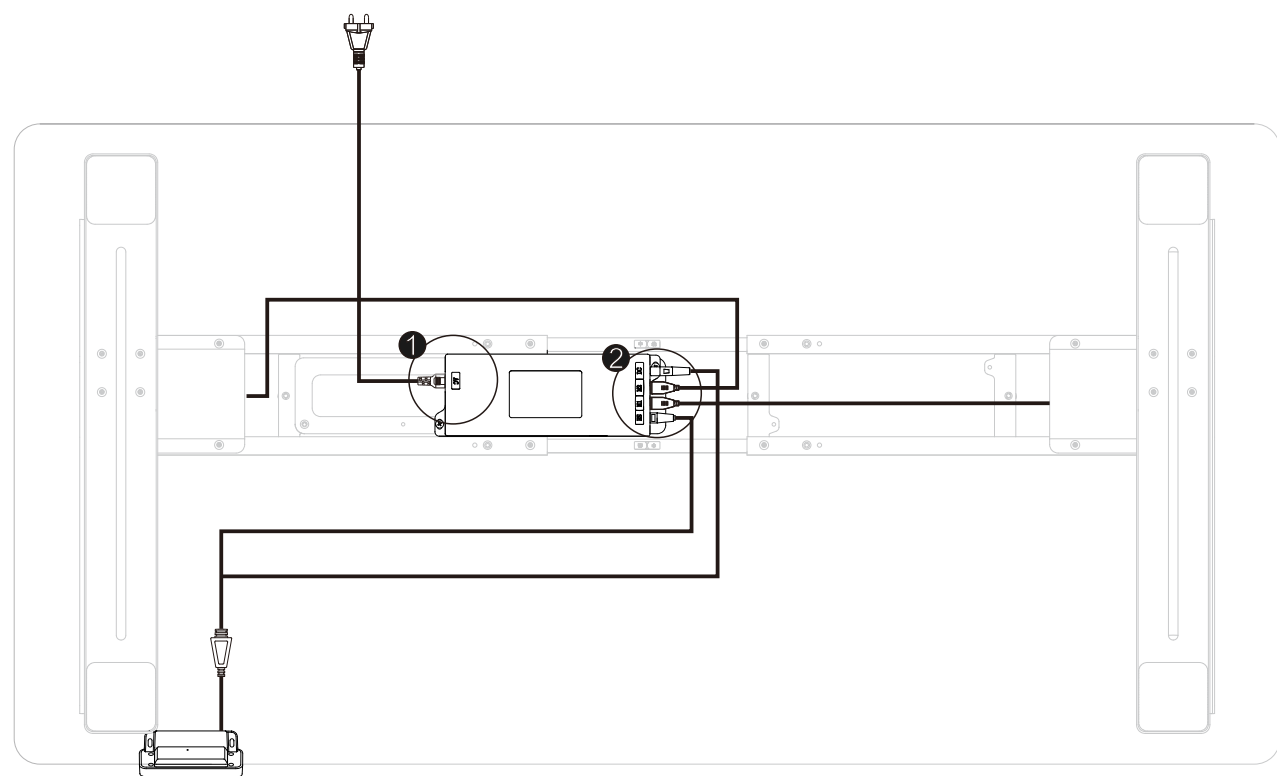   


8 Attach the cable tray

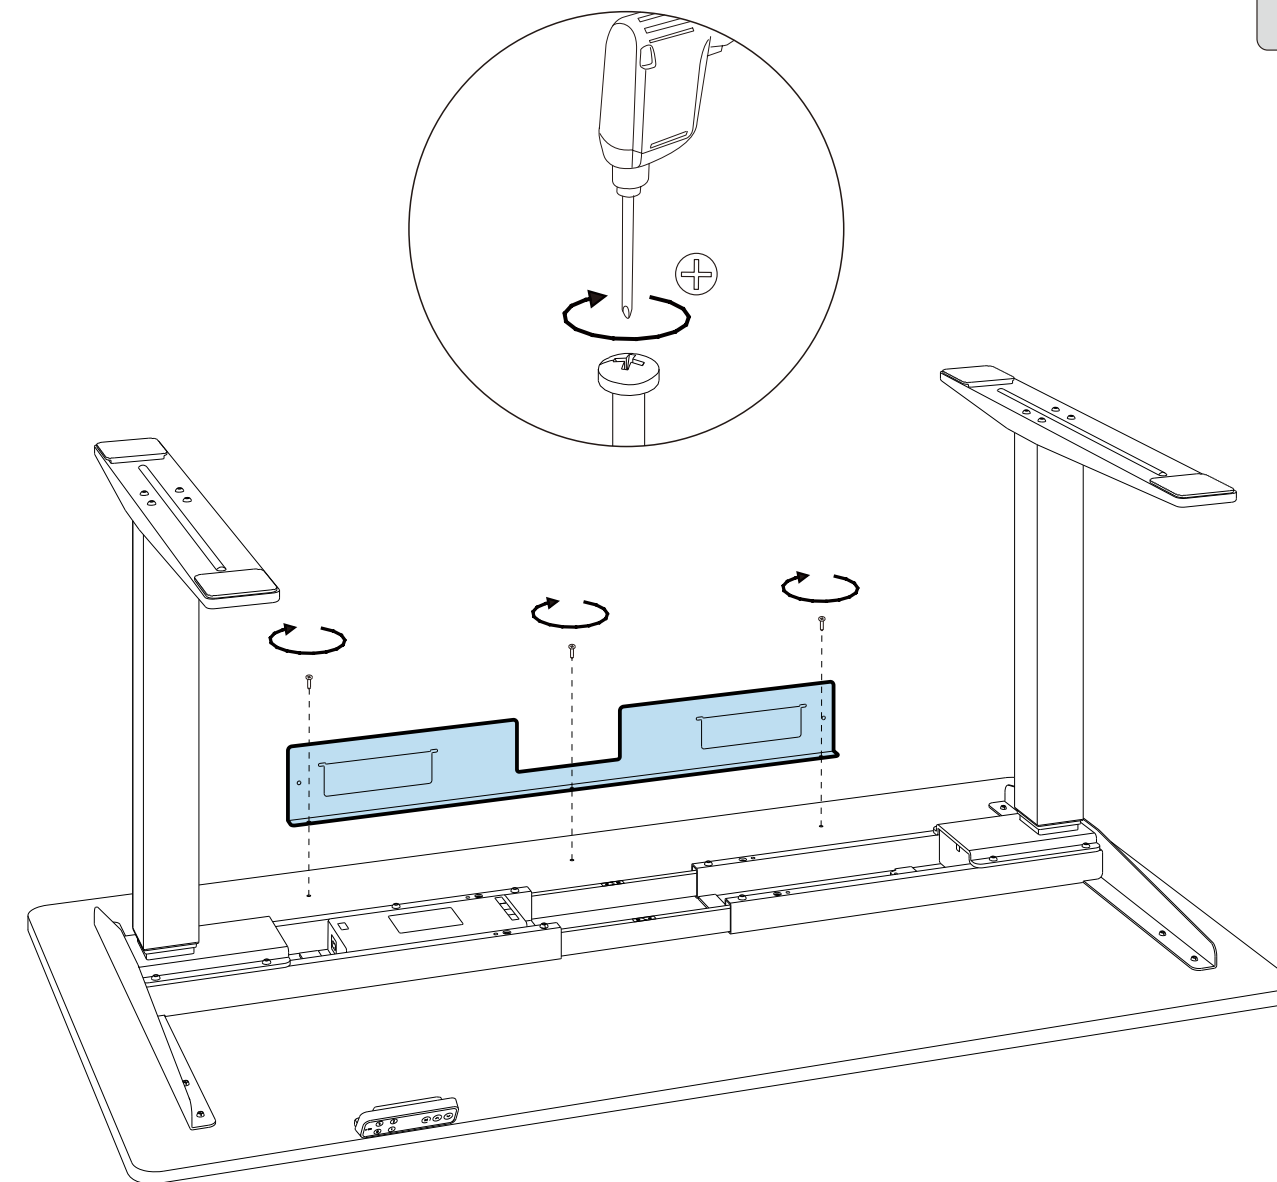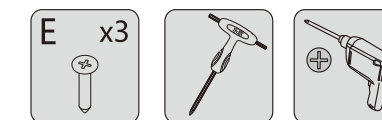  

9 Attach the cable tray

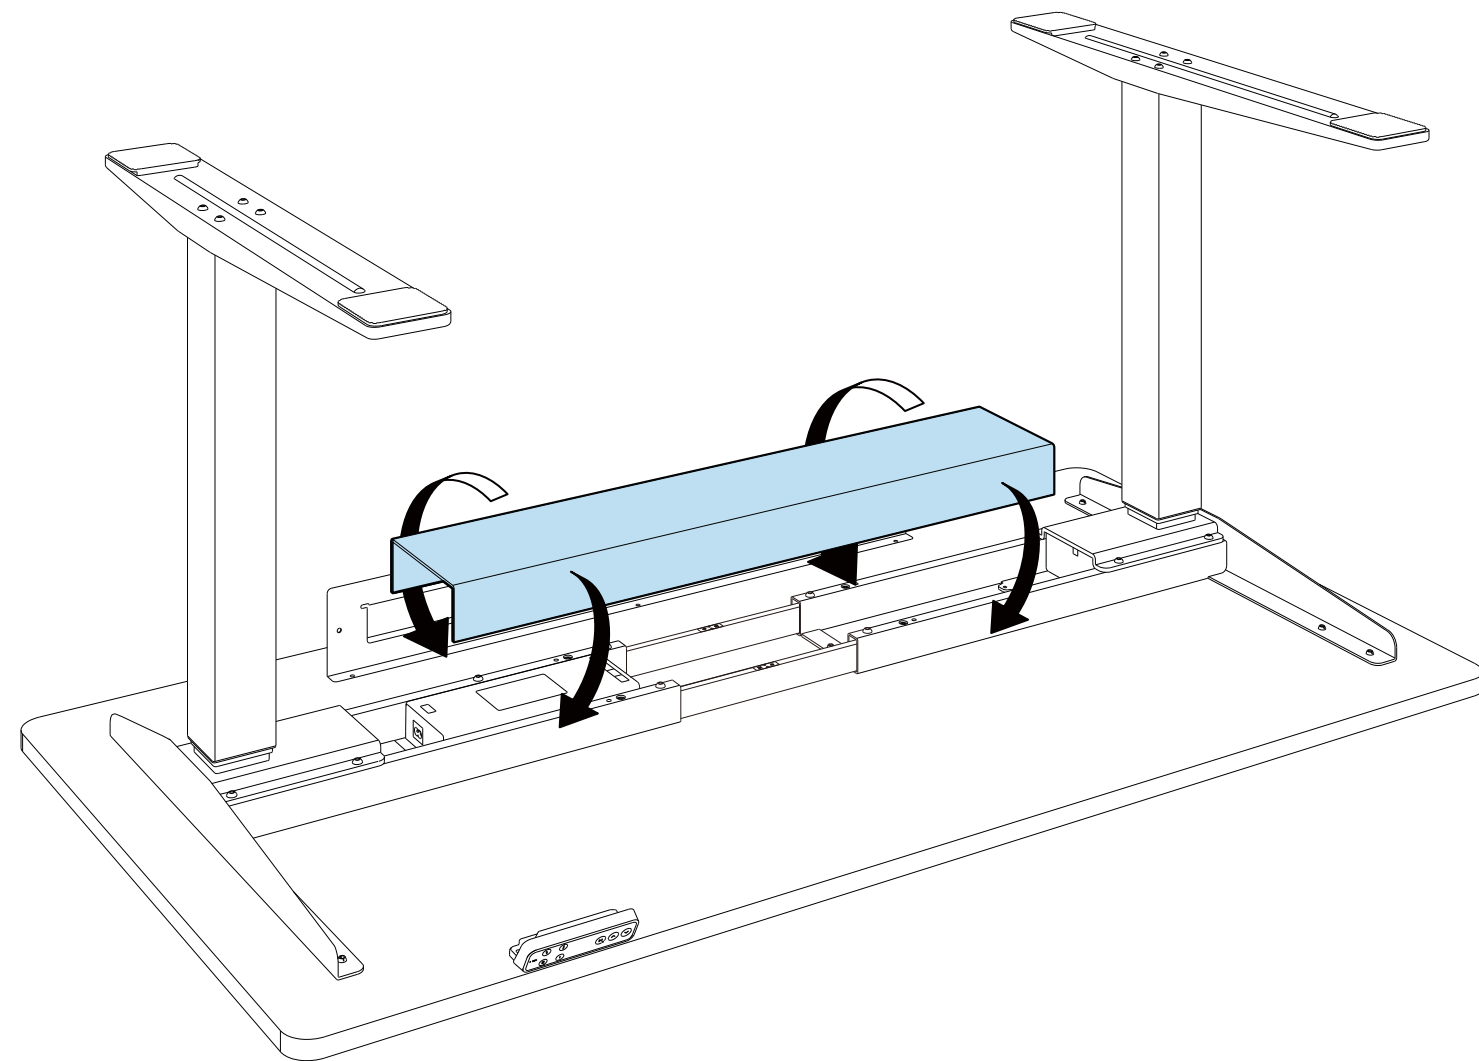 


10 Adjust foot pads for balance

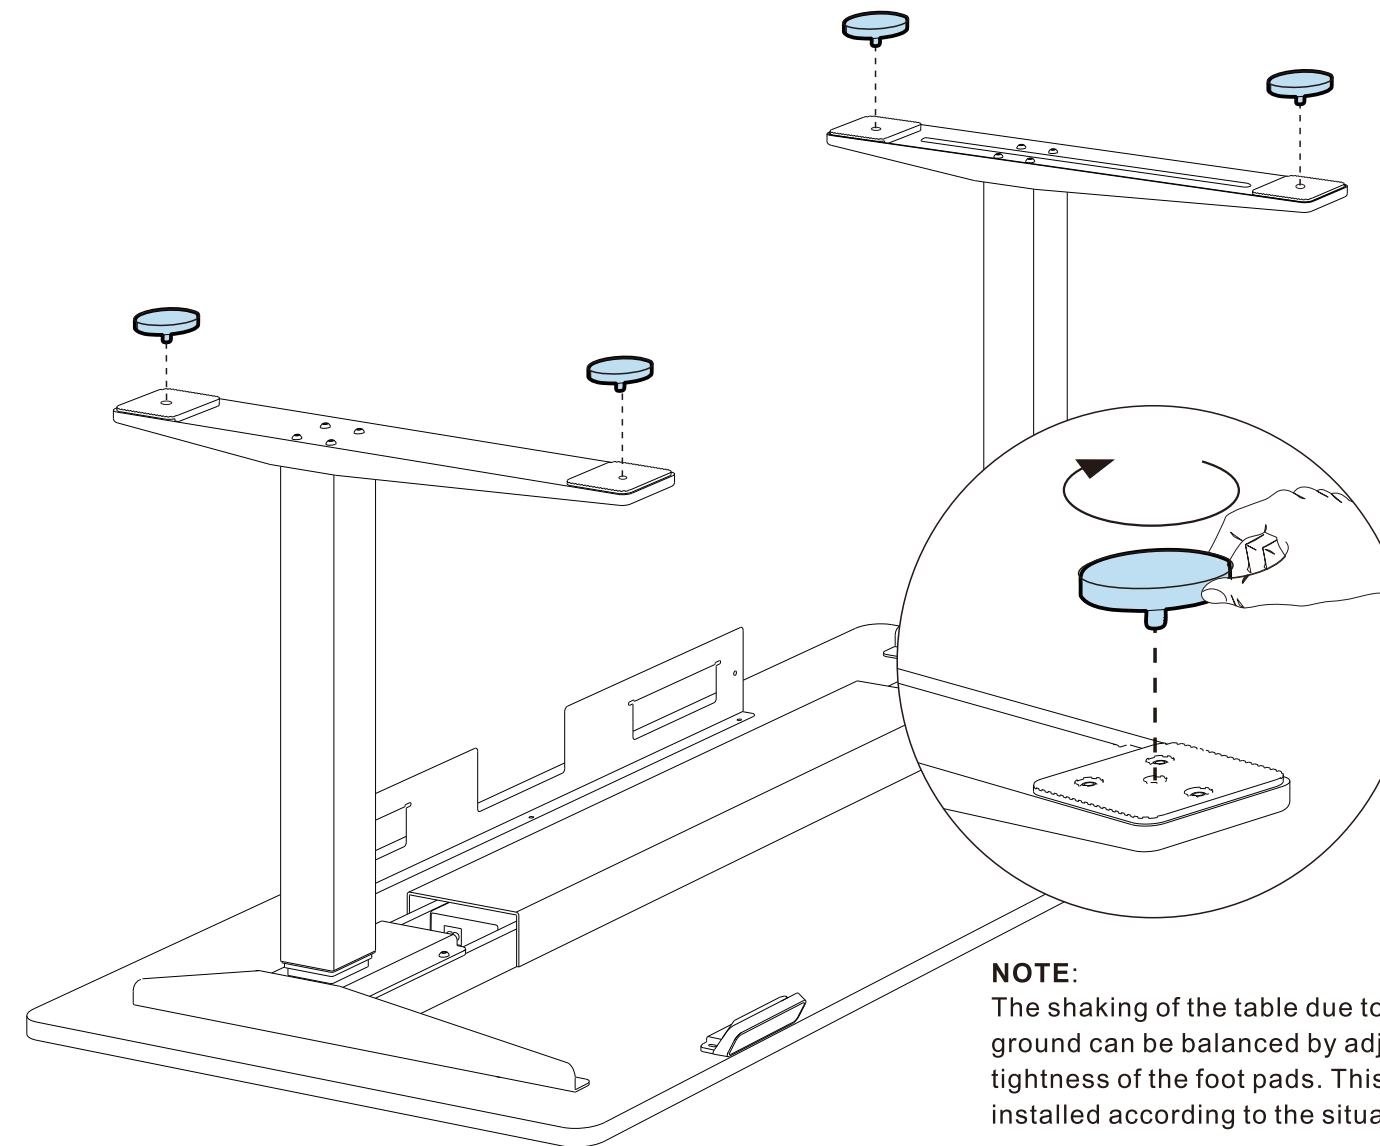 


NOTE:
The shaking of the table due to the uneven ground can be balanced by adjusting the tightness of the foot pads. This step is installed according to the situation.

 11 Finished

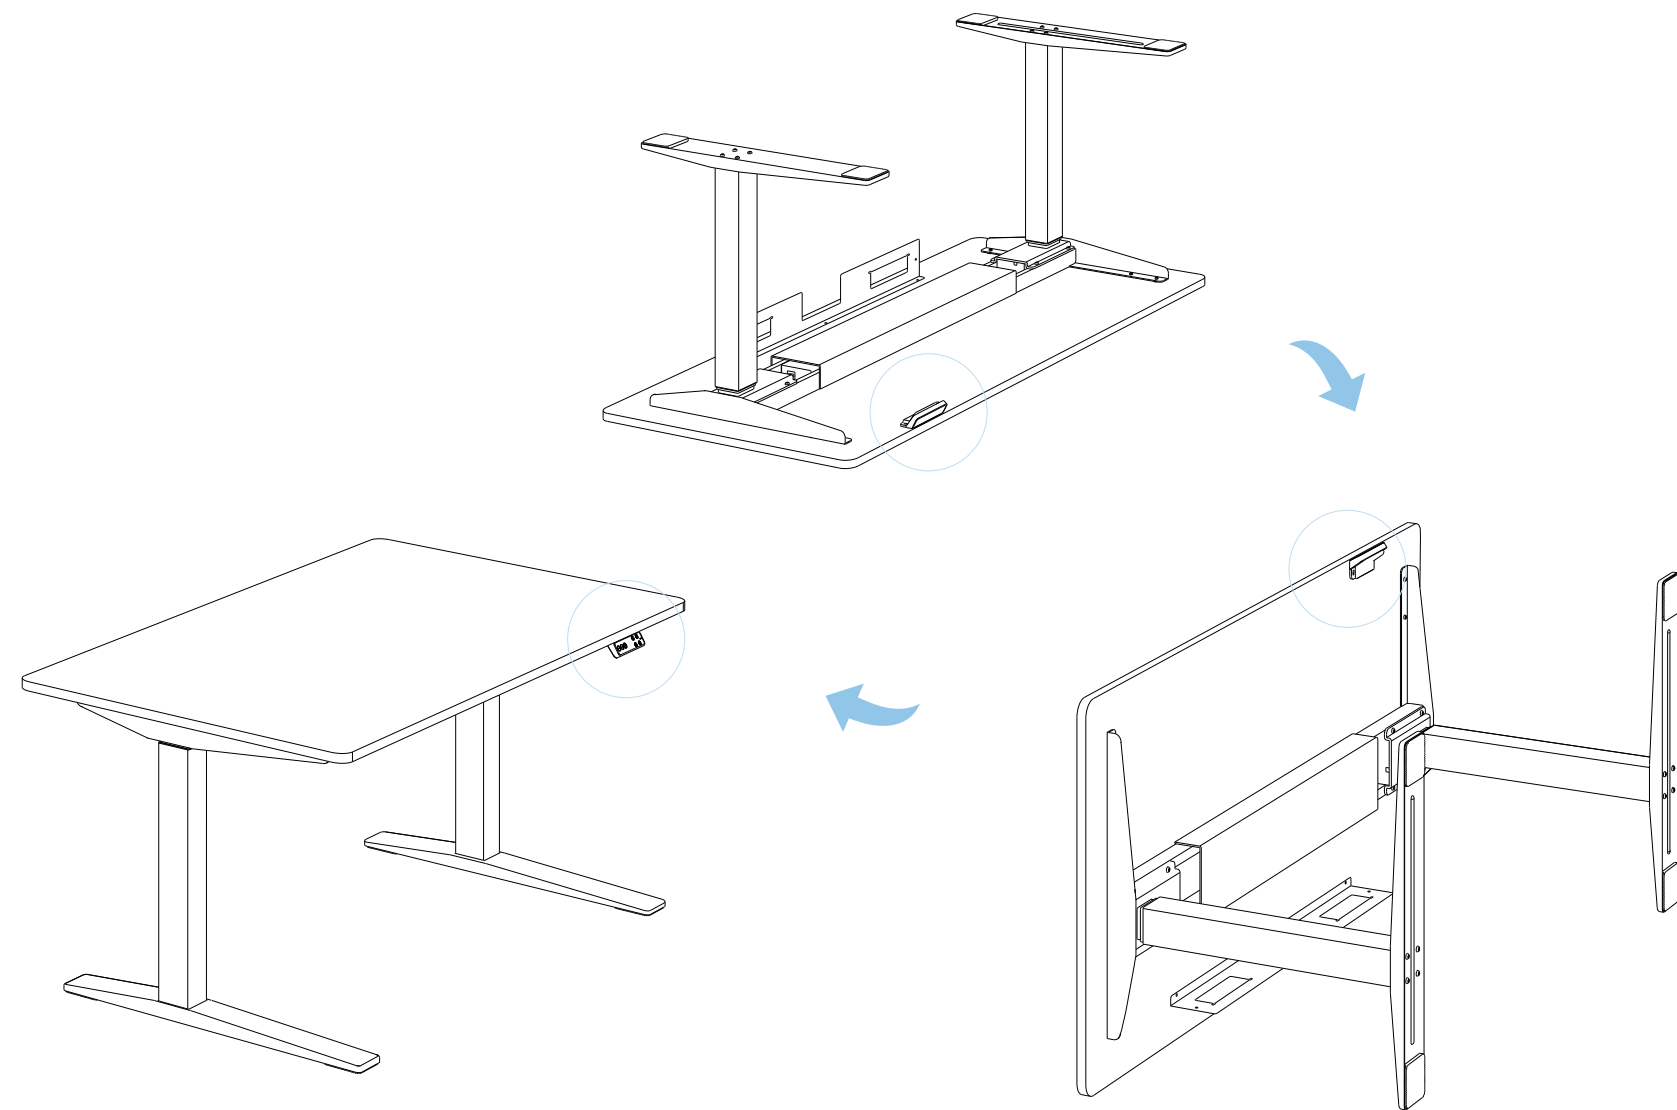


12

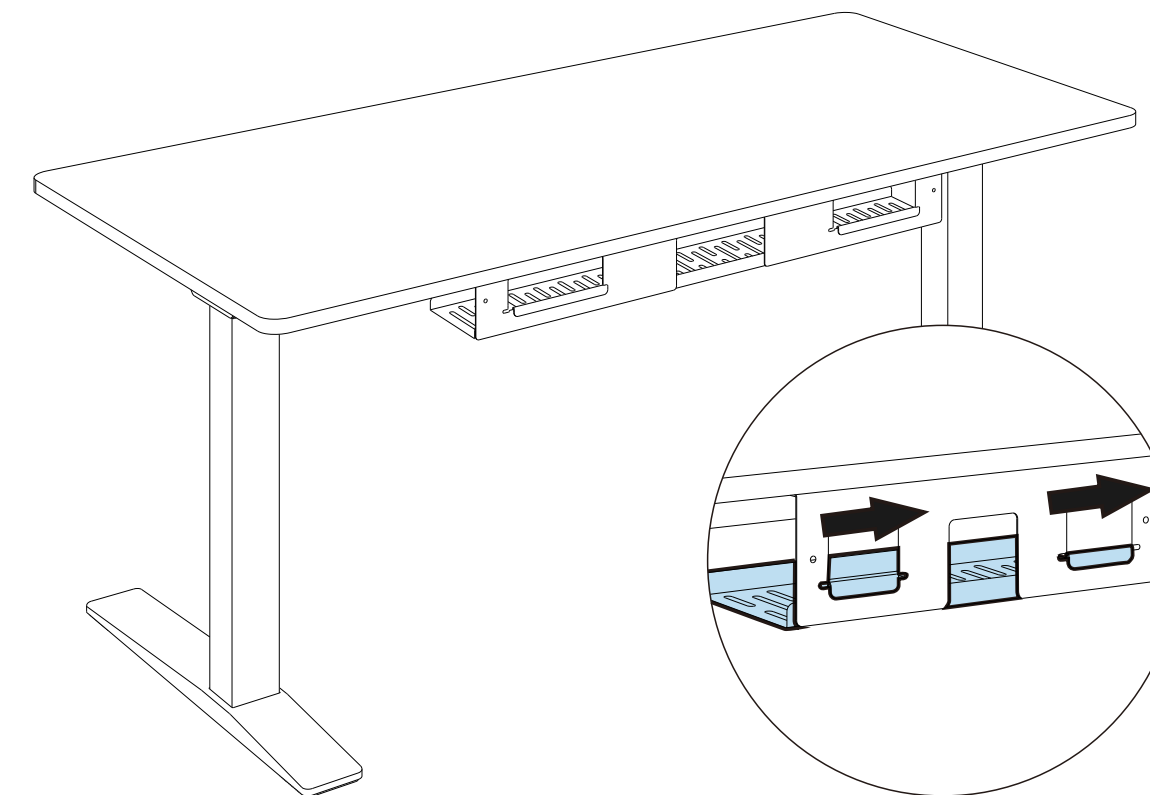 


NOTE:
Cable ties total length 2m, not disposable use product, when you need to tidy up the cable When you need to tidy up the cable, cut it to a suitable length to The cable can be fixed by cutting out a suitable length.



 13 Keypad User Guide


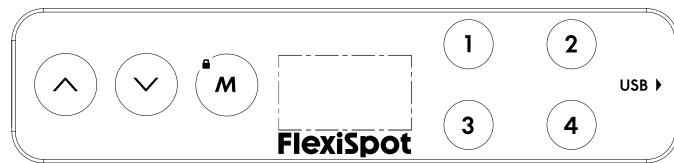


• Child lock function:

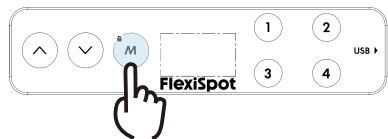 


- When the child lock is turned on, the child lock blue indicator light (^ and M directly above) lights up.
- Press the button indicator to flash once.
- To unlock or start the child lock, you need to press and hold the M button for about 5 seconds.
- Only when the child lock is unlocked, all the buttons can work normally.

  • Height Adjustable Function:

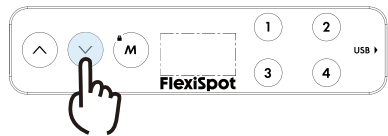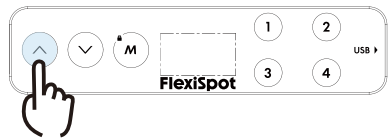


Press the " ^ " or " v " button to adjust the height. The LED display shows the current height.

 • Height Memory Function:

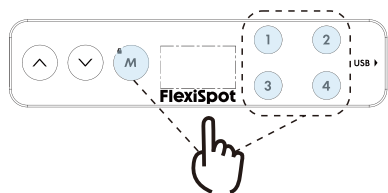


- Press UP or DOWN button and adjust the height to the desired height. Press "M" to save the height, and the screen will display "5- 1"; Press "1" , "2" ,or "3" , "4" then, that is, save the height to the corresponding position 1 or 2 3, or 4, which will show in the display screen as "5- 1" ,"5-2" , or "5-3" , or "5-4";
- Press "1" , "2" and "3" , "4" button directly to automatically adjust the memory height you saved.

 • Collision prevention sensitivity adjustment - optional features:

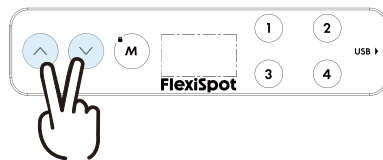

- Press and hold the " ^ " " v " button for 5 seconds at the same time to switch the sensitivity. There are four levels of sensitivity (A-3, A-2, A-1, A-0). Each operation will switch the sensitivity into the next level.
- The display shows "A-0" , the anti-collision function is off; the display shows "A-1", low sensitivity; Display shows "A-2", medium sensitivity; display shows "A-3", high sensitivity;
- During height adjustment, when tabletop comes in contact with another object, it instantly stops and reverses to avoid damage.
- Press and hold the " ^ " " v " button for 5 seconds at the same time. If the display does not display the above code, there is no anti-collision function.

 • Troubleshooting:

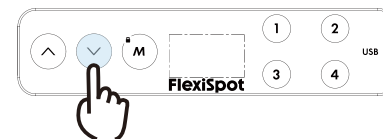

- Reset: When the LED shows " RSt " , press " v " button until the desk reaches its lowest height and rebounds to stop, it means the reset has been finished.
- When it does't work and the LED shows "E01" or "E02", please retry 18 mins later.
- If the " v " button doesn't work, please check the cable connection and then cut off the power for at least 10 seconds. Reconnect to the power and press " v " button to start the reset process when it shows the " RSt " .
- If all these above process are inefficient, plz contact our customer service.

14

Resolving Common Issues

The following tips will help you identify and correct common issues. If you encounter an issue not listed in the table below, or if you follow the instructions below and the issue is still not resolved, please contact your supplier. All such anomalies or errors can only be investigated and corrected by the manufacturer or specially trained personnel.

Issue	Solution
Electronic functions are not working properly	Verify cables are connected correctly
Slow ascent	Check whether the desk load is too heavy (over 160 kg)
Desktop slips during ascent	
Keypad often goes into reset state	
Keypad often goes into reset state	Reset the desk
Desk does not rise or lower the full distance	
Desk remains at lowest height	
Desk motor has been running for more than 18 minutes	Let the desk idle for 18 minutes with the power connected
Press the down button and the device does not drop but rises	Check for obstructions under the table or if the harness is hanging down

15

Attention

1. Power supply: AC100V - 240V, frequency 50/60HZ;
2. Working environment: 0-40°C;
3. Before cleaning, you have to unplug the power supply cable. Clean with a slightly damp cloth to wipe away the surface dust. Keep all electrical components away from liquids. Do not damage the connection line and keep the plug in a safe position.
4. Inside the control box, there are electronic components, metal parts, plastic parts, wires and so on. They should be disposed in accordance with the local laws and regulations. They cannot be disposed as household waste.
5. Before using the product, please make sure the product has been installed correctly.
6. Before starting use of the product, please read the instructions to fully understand all the product's functions and settings.
7. Keep children away from electric height-adjustable desks, control units and handsets. Manufacturer is not responsible of any damages that result from children's unpredictable behaviour.
8. Slight noise caused by the multi wedge belt or brake system will not impact the use of this product.
9. Do not use corrosive or abrasive materials to clean this product and please dispose of cleaning solutions in an environmentally friendly manner.
10. Understand the risks associated with using this product. Children or those with cognitive impairment should not use this product without supervision.
11. If the power supply cord is damaged or broken, it must be replaced by the manufacturer or a relevant specialist to avoid any injuries.
12. Please operate in a clean and safe environment. For example, do not left around your tools. And always be careful to deal with packaging materials, in order to avoid any kinds of possible danger. Potential chocking risk exists when children play with plastic bags!
13. If necessary, retain the original package for future transportation.

16

Recycling and Disposal

This product cannot be disposed of as household waste. To prevent damage to the environment, this product should be recycled. Please use the relevant recycling systems available to you or contract the distributor or manufacturer for recycling assistance.

Exporter :
Manufacturer: Loctek Ergonomic Techonology Corp.Add: 588 Qihang South Road, Binhai Industrial Zone, Yinzhou District, Ningbo, Zhejiang, 315145, P.R. China

Importer :
FLEXISPOT LIMITED, 3 GOWER STREET, LONDON, GREATER LONDON, WC1E 6HA

17 FlexiSpot Limited Warranty

Your satisfaction is our #1 priority here at FlexiSpot. That’s why we’re pleased to offer a limited warranty that covers defects in material or workmanship on all new FlexiSpot products. This warranty applies solely to the original purchaser and is non-transferable. Only consumers purchasing FlexiSpot products from authorized FlexiSpot retailers or resellers may benefit from our limited warranty.

What is Covered?

FlexiSpot Height Adjustable Desk Frames

All FlexiSpot height adjustable desks purchased on or after 1.Jan,2022 include a limited, non- transferable warranty. We hereby cover all FlexiSpot height adjustable desks for a period of:

FlexiSpot Standing Desk E7Q/E7 PRO/Q8 :

- 10 years for the frame, motor and other mechanisms

FlexiSpot Standing Desk E7 & E8 :

- 7 years for the frame, motor and other mechanisms

FlexiSpot Standing Desk ED5 & EQ5 :

- 5 years for the frame, motor and other mechanisms

All other standing desks except for the listed above :

- 3 years for the frame, motor and other mechanisms

FlexiSpot Sit-Stand Desktop Workstations

All Flexispot sit stand desk converters purchased on or after 1.Jan,2022 include a 5-year warranty for the frame, desktop, and a 3-year warranty for the gas spring system and other mechanisms.

FlexiSpot Chairs

All FlexiSpot chairs purchased on or after 1.Jan,2022 include a 3-10 years warranty. Please refer to the product page.

FlexiSpot Desk Bikes

All FlexiSpot desk bikes purchased on or after 1.Jan,2022 include a 3-year warranty for the frame, and other mechanisms.

What Happens If My Product is Defective?

FlexiSpot will replace (at no charge to you) the defective parts on any of our products when the defect is due to improper workmanship and/or material. If FlexiSpot is unable to provide a replacement product, and repair is not practical or cannot be completed in a timely manner, FlexiSpot may elect to refund the purchase price in exchange for the return of the product.

Do I Have to Pay Shipping Costs for a Replacement Product?

In the rare event that your FlexiSpot product is defective, we will provide you with a replacement item shipped at no cost to you within The UK mainland. We use DHL to ship replacement products, but expedited shipping is available if you choose to pay the additional expense. If you would like to have a replacement product shipped to an address outside The UK mainland, you will need to pay the shipping costs.

What is Not Covered?

Our limited warranty does not cover any problem caused by:

1. Conditions, malfunctions or damage not resulting from defects in material or workmanship.
 2. Conditions, malfunctions or damage resulting from normal wear and tear, improper installation, improper maintenance, misuse, abuse, negligence, accident or alteration.
 3. Accessories, connected materials and products, or related products not manufactured by FlexiSpot.
 4. Conditions, malfunctions or damage resulting from failure to follow the instructions and guidelines relating to the product’s intended use.
- Our limited warranty is void if a product is returned with removed, damaged or tampered labels or any alterations (including removal of any component or external cover).

How to File a Claim?

Filing a claim for warranty service is quick and easy. Simply contact customer service via email at info.uk@flexispot.com or toll free at +44 20 3929 3835. Make sure you have your sales receipt or other proof of purchase handy. You will need to provide evidence of the date and place of purchase for your FlexiSpot product. Disclaimer of Warranties; Limitation of Damages Except to the extent prohibited by applicable law, all implied warranties (including warranties of merchantability and fitness for a particular Purpose) shall be limited in duration to the duration of this warranty, and Flexispot shall not be liable for any incidental, indirect, special, or Consequential damages, including but not limited to loss of profits or Revenue, resulting from any breach of express or implied warranty or Condition, or under any other legal theory, even if flexispot has been advised Of the possibility of such damages. Some jurisdictions do not allow limitations On the duration of an implied warranty or the exclusion or limitation of Special, indirect, incidental or consequential damages, so the above Limitations or exclusions may not apply to you.

Governing Law

This Warranty is governed by the laws of England, without giving effect to any conflict of laws principles that may provide the application of the law of another jurisdiction.